

REPLACEMENT PARTS LIST

M5S SERIES OIL FURNACE

83% AFUE




M5S(*) REPLACEMENT PARTS LIST
(SEE PAGE 3 FOR COMPONENT LOCATIONS)

NEW M5 RPL PICTURE	DESCRIPTION	SB-066-AW	SB-086-AW	SB-066-BW	SB-086-BW	SC-066-BW	SC-086-BW
1	LOUVERED DOOR (WHITE)	903407	903407	903407	903407	903407	903407
2	PAWL LATCH	618107	618107	618107	618107	618107	618107
3	FASTENER, PAWL LATCH	606317	606317	606317	606317	606317	606317
4	AIR FILTER	669064	669064	669064	669064	669064	669064
5	FILTER RETAINER WIRE	669065	669065	669065	669065	669065	669065
6	UPPER PARTITION	387220	387220	387220	387220	387220	387220
7	BLOWER ASSEMBLY	903773	903773	903773	903773	903413	903413
8	BLOWER MOTOR	903774	903774	903774	903774	903433	903433
9	MOTOR MOUNT KIT	Not Used	Not Used	Not Used	Not Used	903489	903489
10	BLOWER WHEEL	667294	667294	667294	667294	667294	667294
11	CAPACITOR	621435	621435	621435	621435	621435	621435
12	CAPACITOR STRAP	606228	606228	606228	606228	606228	606228
13	LIMIT, AUXILIARY	626472	626472	626472	626472	626472	626472
14	BLOWER DECK	495380	495380	495380	495380	495380	495380
15	AIR PIPE	386542	386542	386542	386542	386542	386542
16	CONTROL BOX	264800	264800	264800	264800	264800	264800
17	CONTROL BOX COVER	264790	264790	264790	264790	264790	264790
18	FUSE, 3A (NOT SHOWN)	632261	632261	632261	632261	632261	632261
19	ON/OFF SWITCH	632337	632337	632337	632337	632337	632337
20	TRANSFORMER	621807	621807	621807	621807	621807	621807
21	CLOSE-OFF SHELF	385280	385280	385280	385280	385280	385280
22	LIMIT, AIR TEMPERATURE	626469	626469	626469	626469	626469	626469
23	SWITCH, FAN CONTROL	626468	626468	626468	626468	626468	626468
24	BLOWER RELAY	620537	620537	620537	620537	620537	620537
25	AIR CASING W/ INSULATION	265020	265020	265020	265020	265020	265020
26	SHIELD, INSULATION	264541	264541	264541	264541	264541	264541
27	HEAT EXCHANGER	903422	921144	903422	921144	903422	921144
28	REDUCER COUPLING	669063	669063	669063	669063	669063	669063
29	HOSE CLAMP (2)	606208	606208	606208	606208	606208	606208
30	FLEXIBLE HOSE	663734	663734	663734	663734	663734	663734
31	BURNER	903945	903946	903945	903946	903945	903946
32	PLATE, BURNER	383690	383690	383690	383690	383690	383690
33	RING, CHAMBER	383600	383600	383600	383600	383600	383600
34	COMBUSTION CHAMBER	903423	903423	903423	903423	903423	903423
35	BRACKET, CHAMBER	383720	383720	383720	383720	383720	383720
36	SHELF DIVIDER	Not Used	Not Used	355050	355050	355050	355050
37	COIL DOOR (WHITE)	Not Used	Not Used	903094	903094	903094	903094
38	COIL DOOR STRIKE	Not Used	Not Used	668905	668905	668905	668905
39	COIL DOOR LATCH	Not Used	Not Used	668420	668420	668420	668420
40	RIGHT CLOSE-OFF PLATE	Not Used	Not Used	355490	355490	355490	355490
41	LEFT CLOSE-OFF PLATE	Not Used	Not Used	355480	355480	355480	355480
42	GASKET KIT (NOT SHOWN)	730534	730534	730534	730534	730534	730534

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

M5S Oil Furnace Component Location

CONVERSION KITS	PART NO.
OIL TO GAS BURNER CONVERSION, 066	903426
OIL TO GAS BURNER CONVERSION, 086	903427

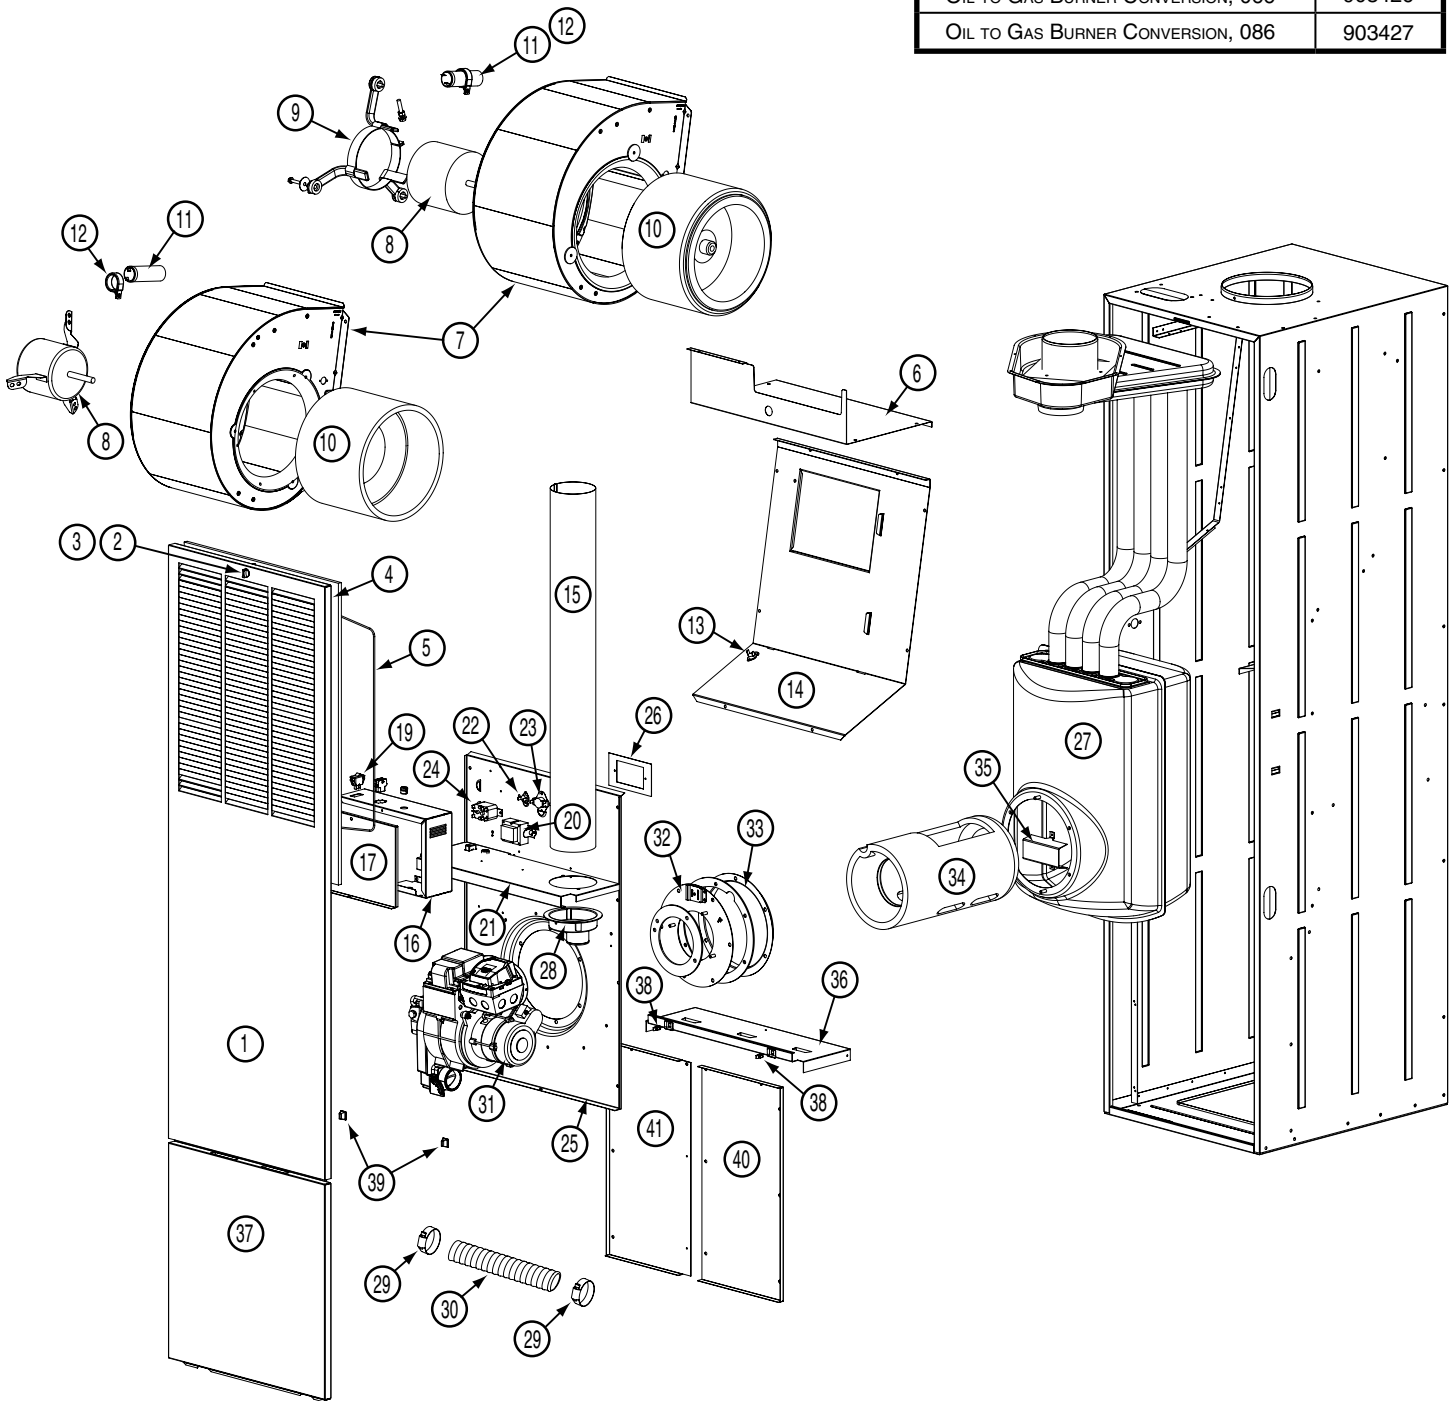

M5S(*) OIL BURNER

ITEM	DESCRIPTION	PART NUMBER	ITEM	DESCRIPTION	PART NUMBER
1	MOTOR	621945	13	INLET AIR BOX ASSEMBLY	660928
2	MOUNTING BOX	660591	14	GASKET KIT (INLET BOX)	660915
3	PRIMARY CONTROL, HW	624647	15	AIR TUBE ASSEMBLY	660918
	PRIMARY CONTROL, BECKETT	624753	16	BURNER HEAD, F3	660468
4	TRANSFORMER	621943	17	NOZZLE ADAPTER	660059
5	GASKET KIT (TRANSFORMER)	660914	18	ELECTRODE KIT	660917
6	BURNER HOUSING ASSEMBLY	660282	19	BLOWER WHEEL	660048
7	ESCHUTCHEON PLATE	660592	20	POWER CORD	634568
8	LOCKNUT	660593	21	NOZZLE, 066	660606
9	OIL LINE KIT	660594		NOZZLE, 086	660605
10	FUEL PUMP	622090	22	FLAME DETECTOR	660603
11	SOLENOID VALVE KIT	624648	23	GUN DRAWER ASSEMBLY	660916
12	COUPLING	660596			

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

